

DAIWA FORESITE 2.0

Operating Instructions

Thank you very much for choosing this DAIWA product. We have designed it to be a sturdy, rugged, dependable product that will provide many years of satisfactory use. Please read these operating instructions carefully before use so that you can take full advantage of the tripod's features. Retain these operating instructions in case you need to refer back to it.

⚠ Caution

This caution icon refers to information pertaining to important safety procedures in preventing injuries, or damages which may occur as a result of mishandling this product.

🚫 Prohibition


This prohibited icon refers to information pertaining to prohibited contents. Please refer to instruction closely to avoid accidents.

Specification

Folded length	760mm
Max. operating height	1,705mm
Bowl leveler	60mm
Weight	3,200g
Tilt range	+90/-85°


Y725

Components

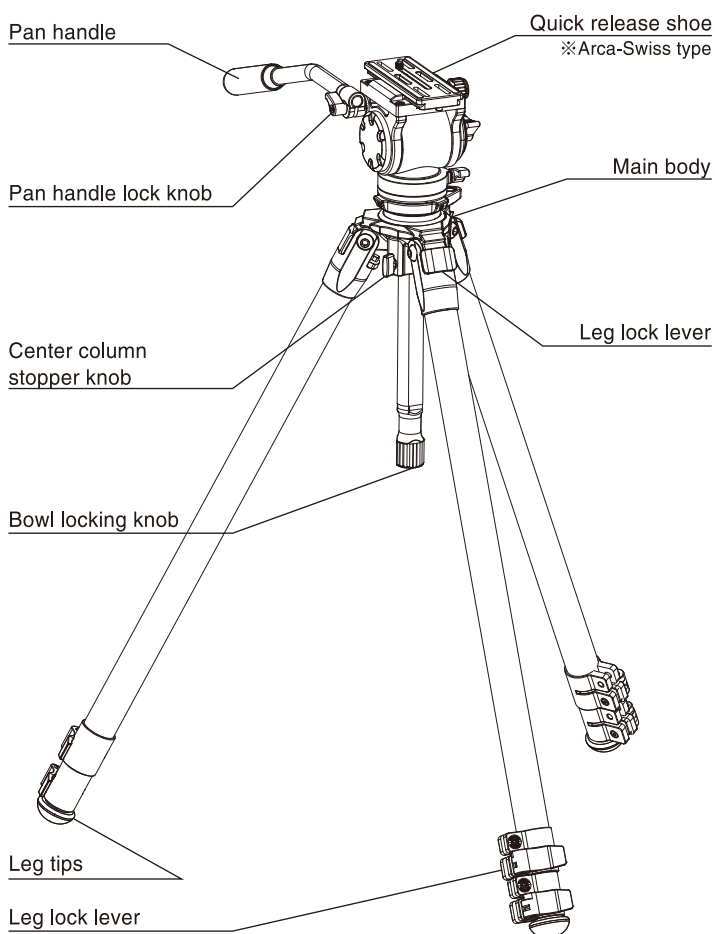

※ Please note that although the tripod head and quick shoe are Arca-Swiss compatible, we do not guarantee that you can attach Arca-Swiss compatible products from other companies.

Fluid Head

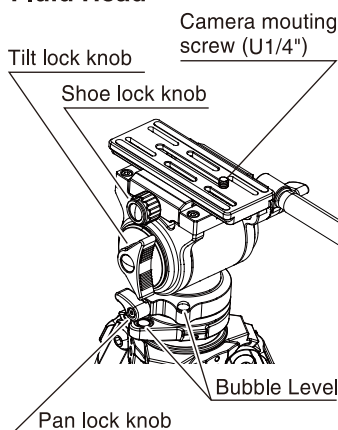

※ Bubble level on the tripod offers approximate leveling of the tripod.


Equipment that can be loaded on this tripod

🚫 Prohibition

This equipment is designed to carry up to 2kg of equipment. Do not overload. Some equipment weighting under 2kg, may not balance well due to its weight distribution.

Accessory


Metal Spike

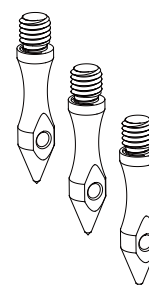

※ Metal spikes are stored in the rubber feet

Carrying the tripod


🚫 Prohibition

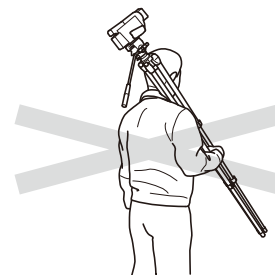

Carrying a tripod with a camera attached can lead to unexpected accidents. For this reason, we recommend you remove your camera when carrying the tripod.


Setting up

⚠ Caution

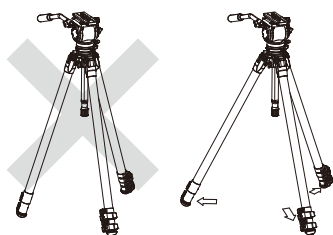


Make sure that the lock levers and knobs on the head and legs are properly locked. To prevent accidental equipment fall or tripod tipping over, making sure all three legs are opened all the way.


How to adjust the head leveling

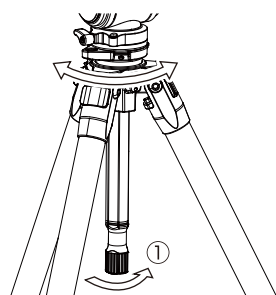

Before mounting the camera, level the head by following these steps:
① Turn the ball lock knob in the direction of the arrow to loosen it.

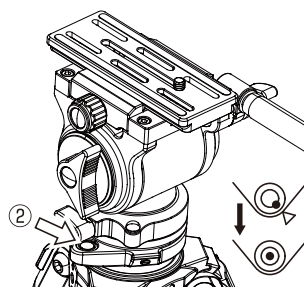

② Move the head and adjust it so that the bubble in the leveler is inside the circle as shown in the figure.



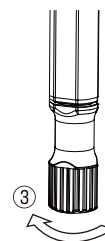


③ Tighten the ball lock knob to lock the head in place.
※ Bubble level on the tripod offers approximate leveling of the tripod. Please rehearse before shooting.

with exclusive case

Attaching camera to the quick release plate

⚠ Caution

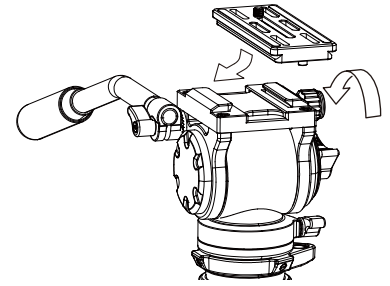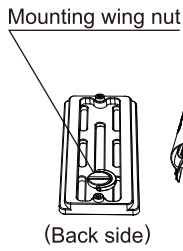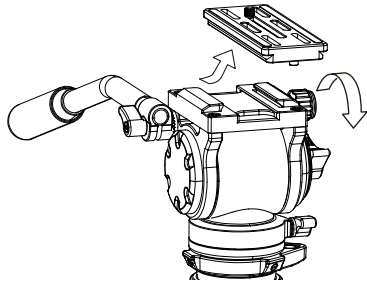




Loosen the shoe lock knob by turning it in the direction of the arrow until the quick shoe can be removed.

Screw the equipment mounting screw on the tripod attachment screw of your equipment and fix firmly.

After attaching the quick shoe to the head, tighten the shoe lock knob. To prevent camera from falling, make sure the quick shoe does not move before using it.


Using the head

⚠ Caution

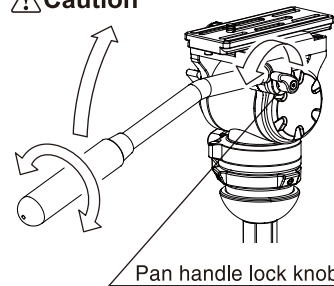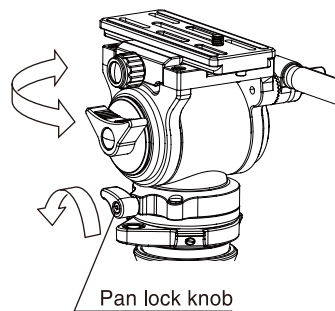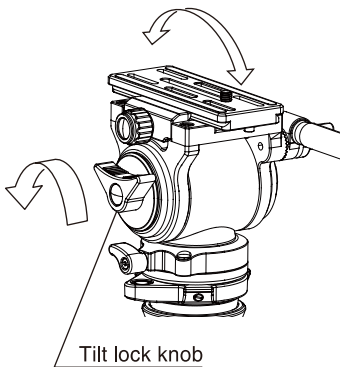

Head fixing screws

Head fixing screws

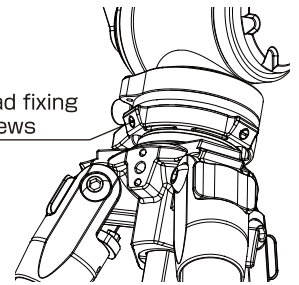

Loosen the tilt lock lever, the head will tilt back and forth.



Loosen the pan lock lever, the head will rotate horizontally.

By loosening the pan handle lock knob, the position of the pan handle can be adjusted up/down and in the rotation direction. Once the pan handle is set to the desired position, tighten the pan handle lock knob securely.

When heavy camera is used, use the head lock screw to prevent the head and tripod from loosening. Lock the head using Allen Wrench from the bottom of each tripod base.

Leg angle adjustment


⚠ Caution

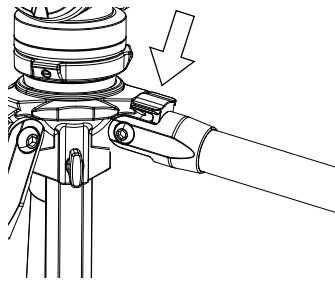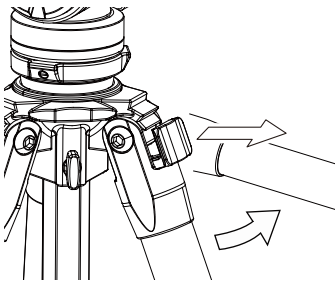

When opening each leg, it will stop at the first (standard) position. To change the angle of each leg, move the leg a little closer to inside and pull the leg angle adjustment lock out one click.


After choosing the desired leg angle, securely push in the adjustment lock.

Lifting the center column

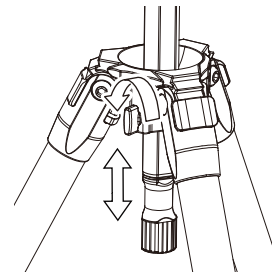


Place hand on the head and loosen the center column stopper. When the head is moved up/down to the desired position, lock the stopper securely.

Low angle

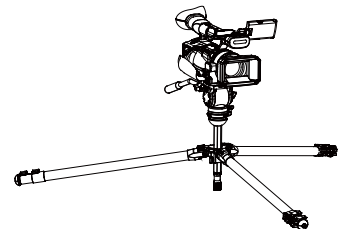


Low position allows you to shoot at a low angle

Extending legs

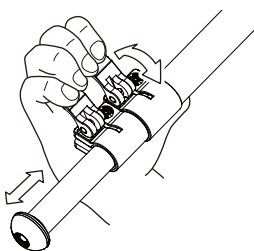

Open the leg lock lever to allow the legs to extend or retract. Lock the lever securely at the desired position. Using larger leg pipes first will increase stability.


Exchanging the leg foot

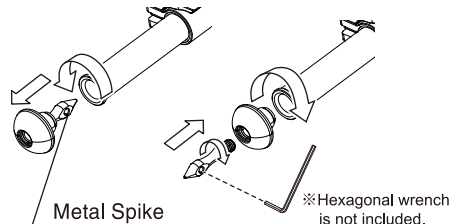

- Firmly grip the bottom leg pipe, loosen and remove the rubber foot, and then remove the metal spike attached to the rubber foot.
- Screw the metal spike base into the outside of the rubber base, then screw the rubber base into the leg.

Care of the product

- DO NOT apply any grease or oil to this product.
- Clean with a mild detergent and a soft cloth only.
- DO NOT use the unit close to flame. Avoid extreme heat.

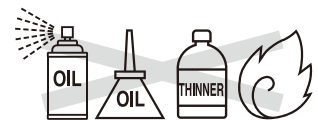

Slik Corporation reserves the right to make changes in design and/or improvements on the products without any obligation and advanced notice.